HOW TO MEASURE - EXAMPLE

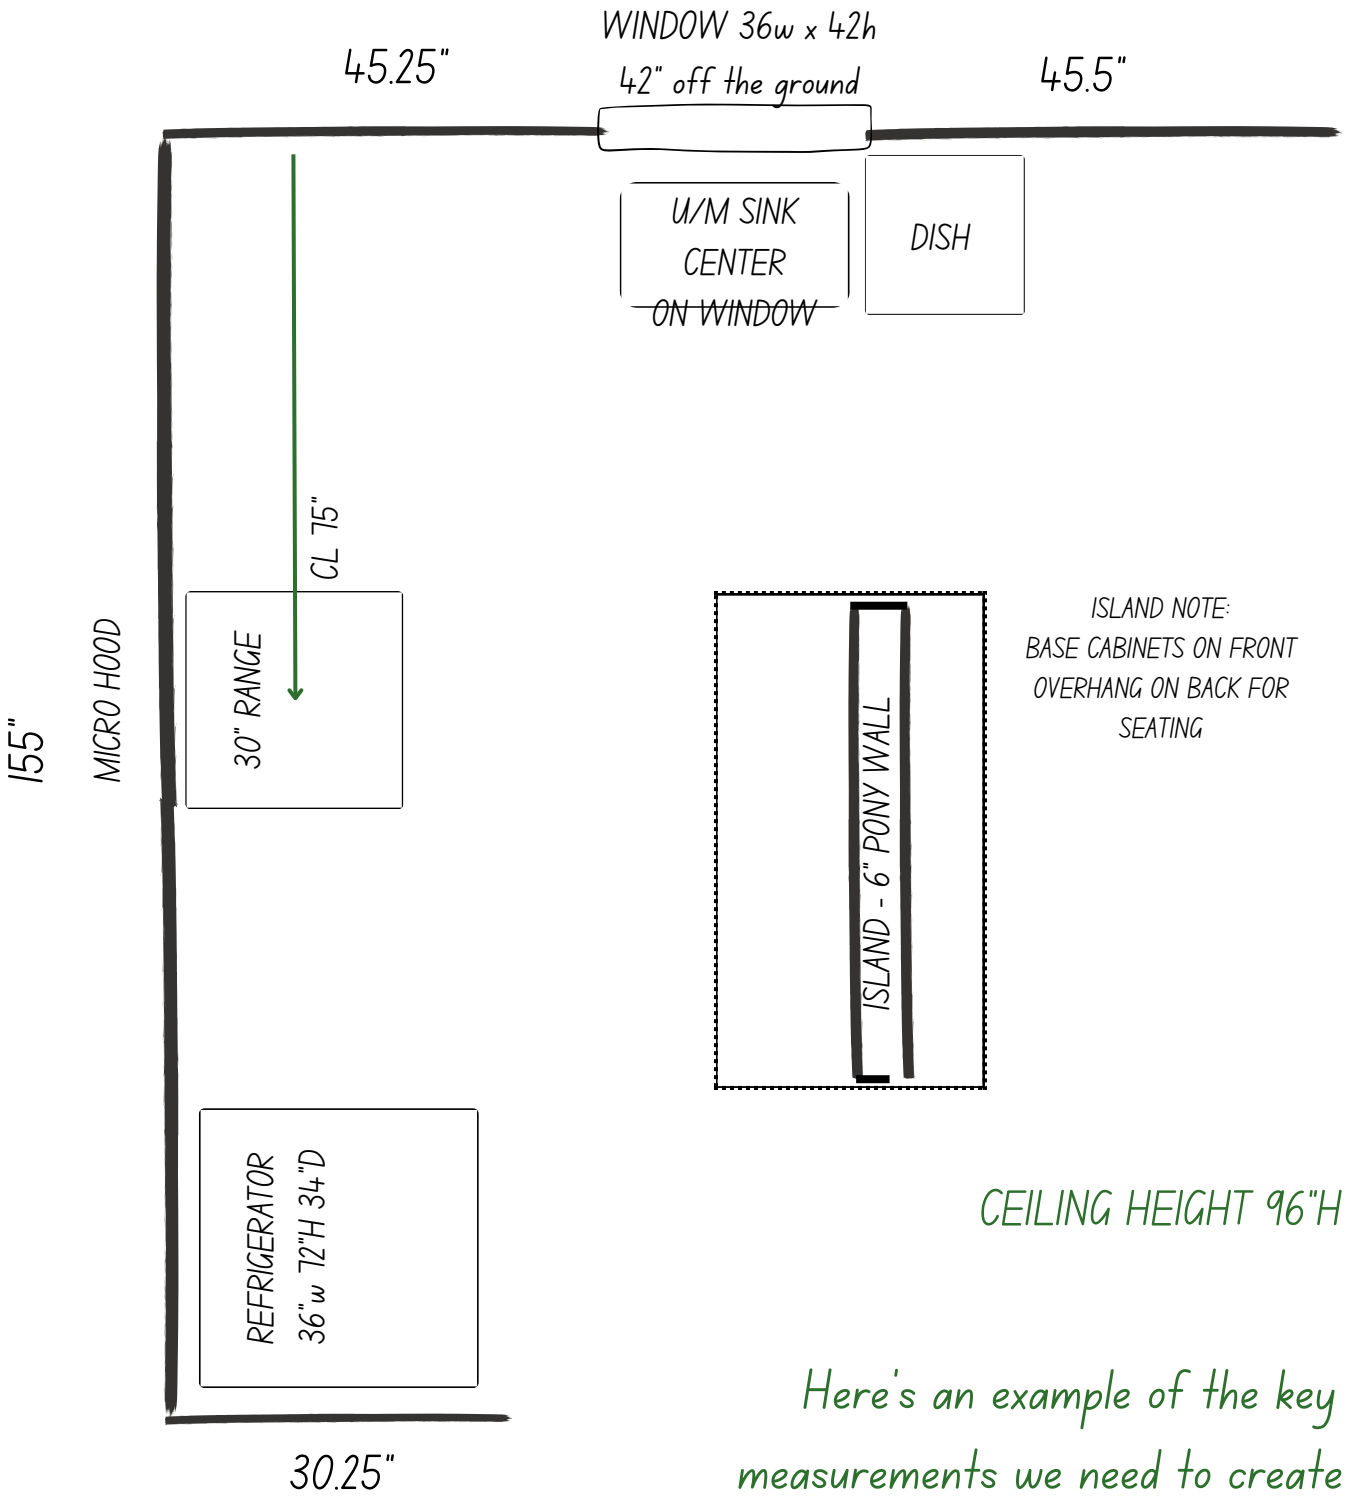

CEILING HEIGHT 96"H

Here's an example of the key measurements we need to create an accurate design for your space. The more details you provide, the better the final result will be. Photos of the area are also very helpful for visual reference.

WHOLESALE CABINET CENTER
WHOLESALE PRICES TO THE PUBLIC

CHECKLIST

- [ ] WINDOW LOCATION + DIMENSIONS
- [ ] DOOR LOCATION + DIMENSIONS
- [ ] CEILING HEIGHT
- [ ] APPLIANCE LOCATIONS
- [ ] APPLIANCE SIZES/SPECS +CENTERLINES
- [ ] PICTURES OF SPACE
- [ ] SINK TYPE - APRON OR UNDERMOUNT